



Arming system when neither pets nor people are home

Enter your four digit code

Press the *AWAY* button (usually the #3key)

Leave within the 60 Second delay (this allows you time to exit and lock doors)

Arming the system when you are staying in

Enter your four digit code

Press the *STAY* button (usually the #2key)

This feature arms your entry/exit doors and windows, while bypassing interior doors and motion sensors so you can move around freely while being secure in your home

Disarm system

Enter your four digit code

Press the *OFF* button (usually the #1 key)

Siren Silence

Enter your four digit code

Press the *OFF* button (usually the #1 key)

Resetting the system

Enter your four digit code

Press the *OFF* button (usually the #1 key)

Repeat same (you must follow this procedure 2 times to reset the system)

Changing codes

Please note:

Code number 01- is Installer code (You cannot disarm system, this is only for programming)

Code number 02- is Master code (your main code)

Code numbers 03-33 can be assigned to additional users

Change master code

Enter your four digit master code

Press # 8 button

Press 02 (your master code)

Enter the new four digit code - twice (Please wait for confirmation chime)

Adding codes

Enter your four digit master code

Press # 8 button

Press 03

Enter the new four digit code (Please wait for confirmation chime)

Deleting codes

Enter your four digit master code

Press # 8

Enter the two digit user number (ie 03 or 04 or 05....etc. up to 33)

Enter the (#) key

Enter 0 button (Please wait for confirmation chime)

Provided by Marshall Alarm Systems Inc.

If you have any questions or concerns, please call our office 914-962-4699 or email: alarminfo@marshallalarm.com